hoco.

premium product


Colorful Luminous BT speaker HC8



Instruction Manual

We are very glad that you purchase hoco wireless speaker! We hope it brings you fun and enjoy! HC8 Colorful Luminous BT Speaker

SPEAKER OVERVIEW

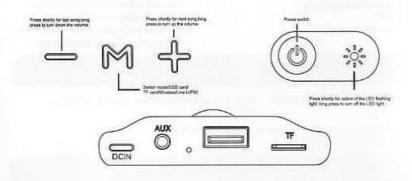

*Plug in the audio cable as the antenna press the M button to switch to FM mode, press the play button to automatically search for radio stations (the search time can be long). After searching for the station, long press the plus and minus buttons to switch channels, short press the plus and minus buttons to increase or decrease the volume.

You need to automatically search before you can adjust the previous channel and the next channel.

HC8 Colorful Luminous BT Speaker

EN

Power On / Power Off
Play / Pause
Previous song / volumeNext song / volume +
TF card slot
Type-C charging interface
AUX port
Switch mode
USB

- Wireless version: Wireless 5.0
- Transmission frequency. 2.4GHz.
- ·Stand-by time: more than 200 hours
- Playing music time: more than 4 hours
- Talk time: more than 4 hours
- Charging time about 2.5 hours
- Support protocol: A2DP, AVRCP, HFP
- Frequency response: 100-20000Hz

How to use

- 1. Long press "O" for 3 seconds, until the LED indicator blinks red and blue in turn.
- 2. Turn on the wireless function on your mobile device.
- 3. Search and select "HOCO HC8".

Speaker Controls

Function	Operation
Power On / Power Off	Long press [🖒] for 3 seconds
Play / Pause	Press [()]
Next / Previous	Long press [+] / [-]
Volume + / -	Press [() / [()]
Answer / Hang Up	Press [()]
Re-dialing calls	Double-tap [🖒]
Mode switch	Click [M] to switch U disk/TF card/FM radio/ Wireless mode
FM automatic search for radio stations	Click [U] to start/cancel search
Lighting effect mode switch key	Press short [] 1 for option of the LED flashing light, long press to turn off the LED light.
TWS pairing	Turn on the two speakers separately, long press one of them when they are not pared [M]. The prempt tone is heard in 4 seconds and the pairing is successful.